

# **TRAINING MANIKIN**

TO ORDER CONTACT:


CPR SAVERS & FIRST AID SUPPLY 300 CARSBAD VILLAGE DR. SUITE 108A-217 CARLSBAD, CA 92008 <u>WWW.CPR-SAVERS.COM</u> <u>PHONE</u>: 1-800-480-1277 <u>FAX</u>: 1-760-720-6278 <u>EMAIL</u>: SERVICE@CPR-SAVERS.COM


## TO START...

- Use this sheet for instructions on how to assemble your manikins.
- Clean the manikin heads before you start (refer to cleaning instructions at the end of this sheet.)

## **CONTENTS & PARTS**

Each manikin comes with a supply of face shield lung bags and an insertion tool.

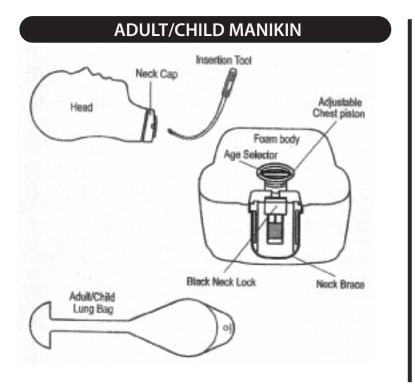


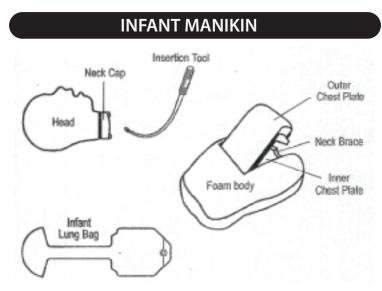

#### TIP:

**Before installing lung bag** - Wrinkle the neck and pouch of the bag by rolling it between your thumb and fingers. This will help ensure that the air flows freely into the lung bag during use.

## ADULT CHILD ASSEMBLY

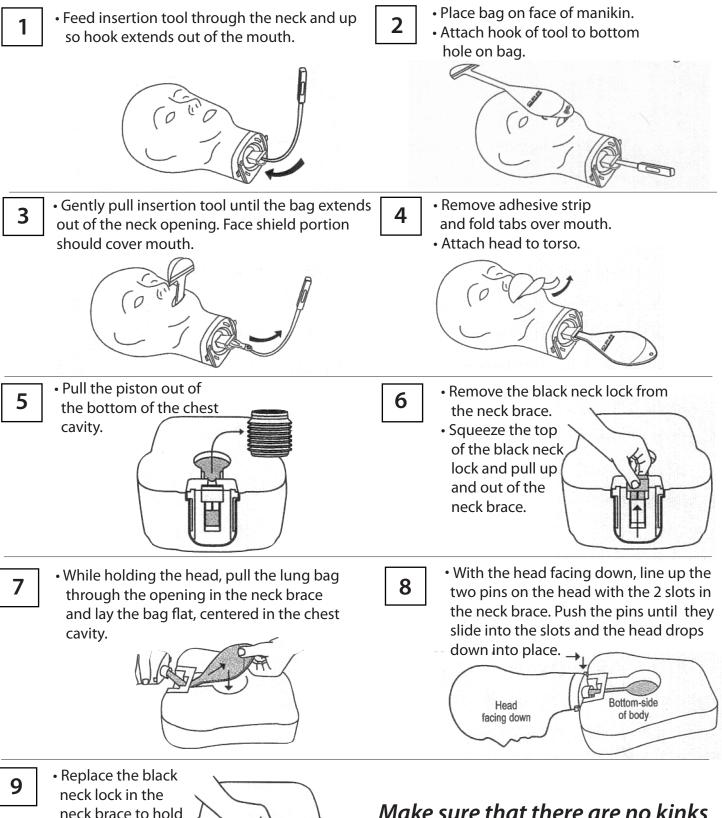



neck brace to hold the head in place.



Make sure that there are no kinks in the lung bag.

- a) Turn the age selector dial on the chest piston so the pin is next to the ADULT or CHILD arrow (whichever age you are learning).
  - b) Replace the chest piston in the chest cavity so that the age selector dial is visible in the body.

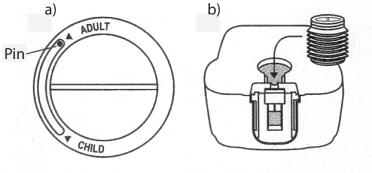

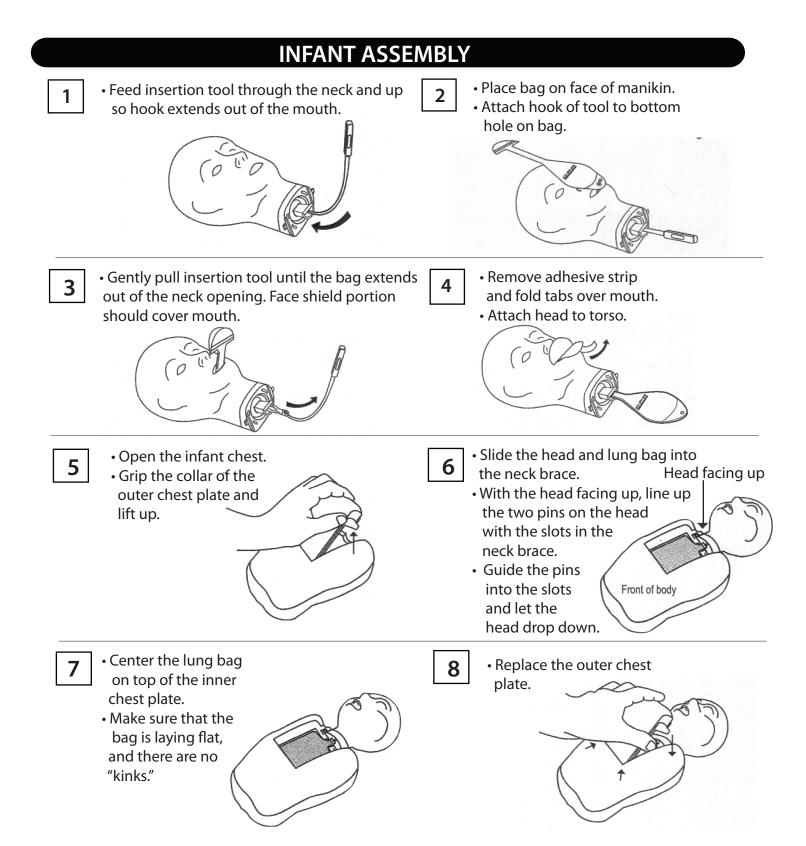

Some suggestions if you encounter any of these problems...

#### If you cannot get the chest to rise when you blow... make sure that:

- The head is tilted back.
- The nostrils are covered.
- The lung bag is properly positioned: It is not twisted... it is laying flat inside the chest cavity.
- The lung bag is properly attached to the head.
- The bag has been fed through the Neck Cap
- The bag has not been torn during assembly.
- The Neck Cap is in the correct position ("FRONT" of neck cap should be lined up with the front of the head).

# If you do not hear a click when you compress the chest of the Adult/Child manikin:

 
- Make sure that you are pressing deep enough (you should hear the click when you compress the foam about one third of its depth).
- Check the Adjustable Chest Compression Piston and make sure that the black pin in the Age Selector Dial is pushed all the way over to the Adult or the Child - depending on the age you are learning.

### **CLEANING INSTRUCTIONS**

#### **NECK CAP**

# Before cleaning heads, remove neck cap:

• To remove the neck cap, twist the neck cap counter clockwise like the lid on a jar (about a quarter of a turn).



### HEADS

Heads can be cleaned by the following methods:

- Run them through a dishwasher, OR...
- Wash heads with soap and water. Then soak 10 minutes in a solution of 1/4 cup bleach mixed with one gallon of water, OR...
- Sanatize with alchol wipes.

• After cleaning head, replace the neck cap by twisting the neck cap back onto the head. Make sure the "FRONT" of the neck cap is lined up with the front of the head.

### BODIES

• The bodies can be safely cleaned with a bleach/water solution (see details under "HEADS" section); alcohol, or any other sanitizing agents.\*

\*Manikin bodies are foam based and are not waterproof. They should not be submerged in water.